 
 


## MEET YOUR ALEXA VOICE REMOTE

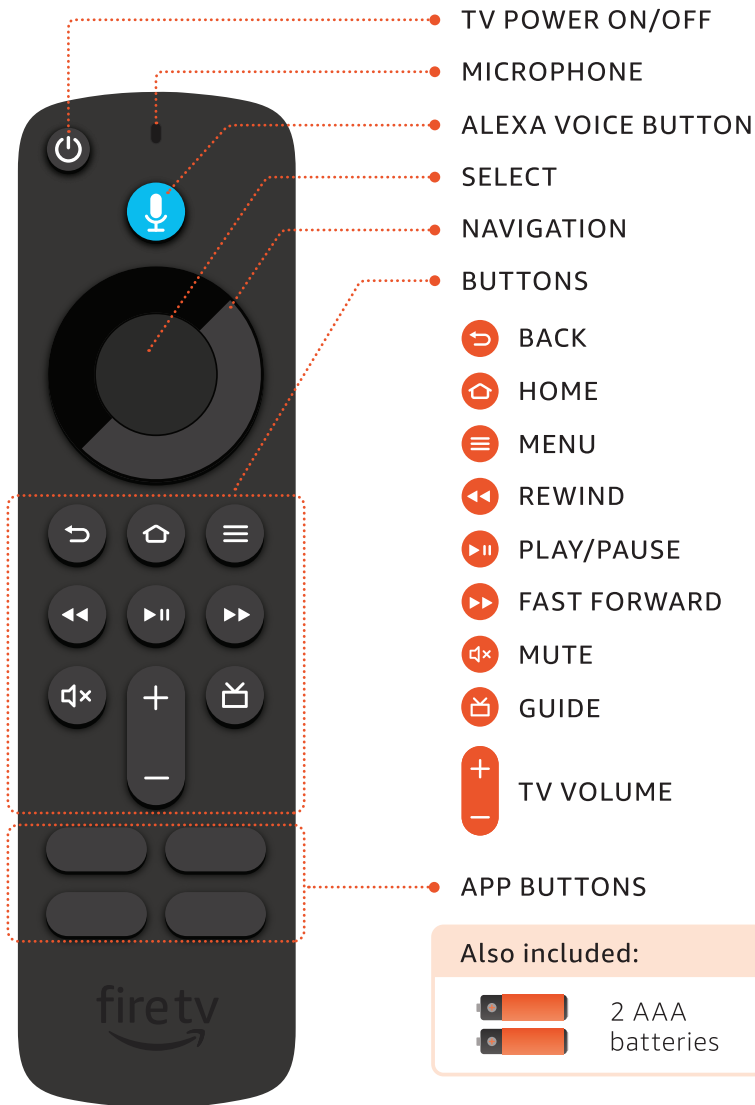 


## POWER UP YOUR ALEXA VOICE REMOTE

### INSERT YOUR BATTERIES

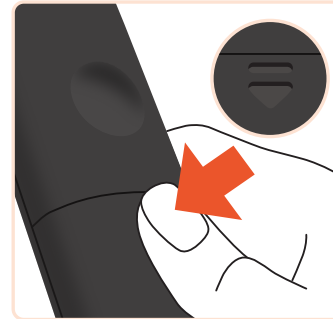

1. Press and hold your thumb on the arrow to release the latch.

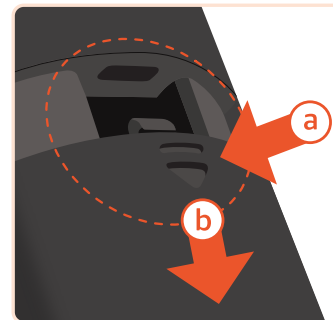 


2. Make sure you **a** press the arrow firmly to release the latch as you **b** slide the cover off.

3. Insert included batteries.

## SET UP YOUR NEW REMOTE

With your original Fire TV remote

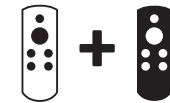

### RECOMMENDED

#### NEW REMOTE

Insert the batteries.

#### ORIGINAL REMOTE

1. Press the Home button on your original remote. Navigate to Settings on the TV's menu bar, then select Controllers & Bluetooth Devices > Amazon Fire TV Remotes > Add New Remote.

2. Your new remote will appear in the list when it successfully pairs.

You can now use your new remote.

**Note:** If the new remote doesn't appear in the list, press and hold Home for 10 seconds on the new remote.

## SET UP YOUR NEW REMOTE

**Without**  
your original  
Fire TV remote



### RESTART YOUR DEVICE

Restart your Fire TV device by unplugging it and plugging it back in. When you see the Fire TV Home screen, wait 60 seconds until "Cannot detect your remote" appears on the screen.

### NEW REMOTE

Insert the batteries.  
Your new remote will pair with your Fire TV device.  
You can now use your new remote.

**Note:** If it didn't pair, press and hold Home (Ⓜ) for 10 seconds.

## HELPFUL TIPS



If your new remote does not connect, remove and reinsert its batteries.

## AAA

Always replace dead batteries with new 1.5V alkaline or 1.2V NiMH rechargeable AAA batteries.



Use your Alexa Voice Remote with your Fire TV device to search for and enjoy thousands of movies, TV shows, apps, and games.

## SCAN FOR MORE HELP AND ACCESSIBLE INSTRUCTIONS



Scan the QR code  
or visit:

[www.amazon.com/  
setup/alexavoiceremote](http://www.amazon.com/setup/alexavoiceremote)