



MEET YOUR FIRE TV SOUNDBAR PLUS

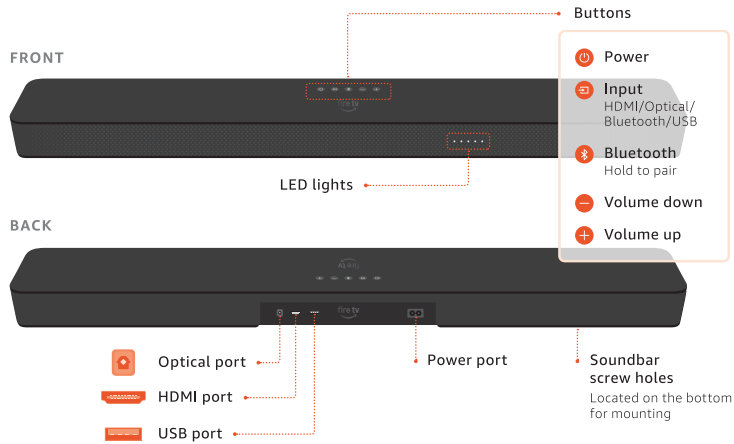

MEET YOUR SUBWOOFER AND SURROUND SPEAKERS

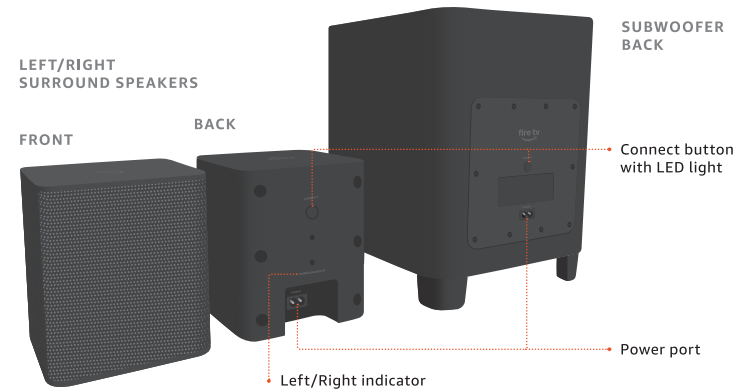

MEET YOUR REMOTE



ALSO INCLUDED

High Speed HDMI cable



Use this cable for the best experience

If connecting to a Fire TV, you can adjust the soundbar's settings in the Fire TV Settings menu.



Soundbar power cord
5 feet (1.5 meters)



Subwoofer power cord
5 feet (1.5 meters)



2 surround speaker power cords
6.5 feet (2 meters)





2 AAA batteries




Soundbar wall mounting accessories
See the mounting instructions

POSITIONING THE SOUNDBAR, SUBWOOFER, AND SURROUND SPEAKERS

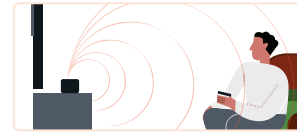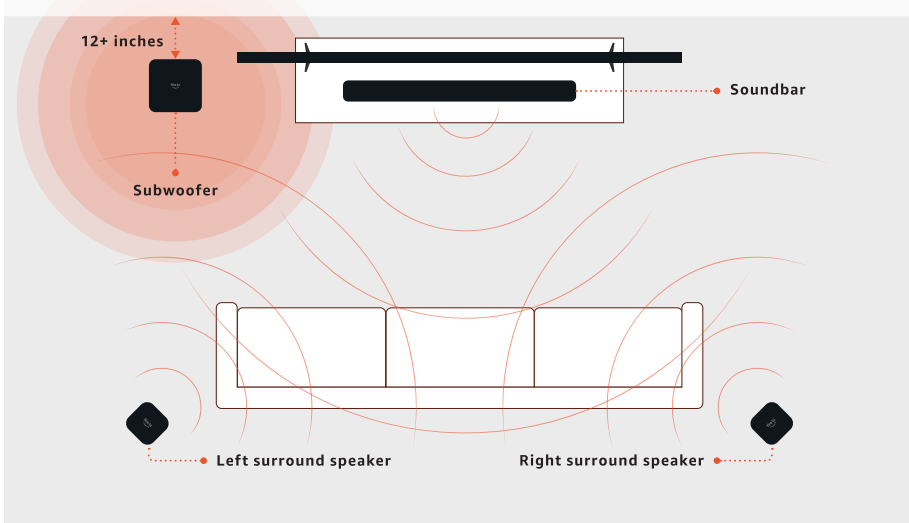


Soundbar position

Place your soundbar under your TV on a piece of furniture or mount it to the wall. For the best sound, position it near ear level.

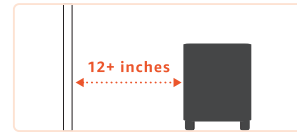

Subwoofer position

Place your subwoofer away from corners and at least 12 inches away from the wall.

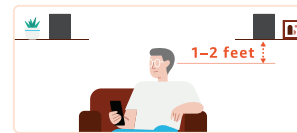

Surround speakers position


For the best sound, place the speakers 6–9 feet from where you watch TV and angle them toward you. They should be behind where you sit. Place them at ear level or 1–2 feet higher.

CONNECT TO YOUR TV WITH HDMI



1. Plug in the power cord

Plug the included power cord into your soundbar's power port and then a power outlet.

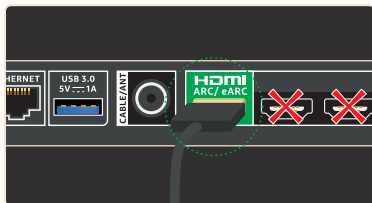

2. Plug the HDMI cable into your TV's HDMI ARC/eARC port

- Find your TV's ARC/eARC port. Plug the included HDMI cable into it.
- Plug the other end into your soundbar's HDMI port.
- Check that your TV's HDMI CEC setting is enabled.

Important: Only your TV's HDMI ARC/eARC port will work with the soundbar.

3. Select soundbar's HDMI input

Press the input button (Ⓜ) on the soundbar or the soundbar remote until the HDMI option is selected.




OTHER TV CONNECTION OPTIONS



OPTICAL

Use if your TV doesn't have an HDMI ARC/eARC port. Dolby Atmos and DTS:X aren't supported.

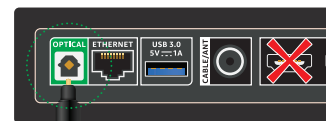


- Plug an optical cable* into your TV's and soundbar's optical ports.
**Optical cable sold separately.*
- If using a Fire TV, go to the Settings and select Equipment Control > Manage Equipment > Amazon Fire TV Soundbar to finish setup.




BLUETOOTH

HDMI or optical cables must be unplugged to use. Dolby Atmos and DTS:X aren't supported.

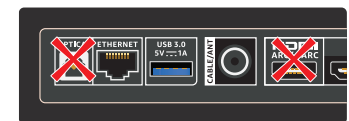


- Press and hold the Bluetooth button on the soundbar or remote until the LED blinks blue in discovery mode.
- In the TV's Bluetooth settings, select Fire TV Soundbar Plus.

SET UP YOUR SUBWOOFER AND SURROUND SPEAKERS

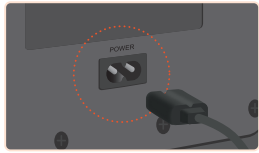


Your subwoofer and speakers come already paired with the soundbar

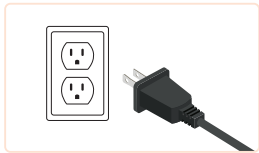

- 1 Make sure the soundbar is powered on.
- 2 Plug the included power cords into your subwoofer and speakers and then into a power outlet.
- 3 The subwoofer and speakers will automatically connect to your soundbar. The LED light on the connect button will turn white.

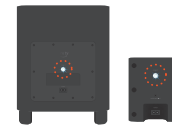


SUBWOOFER AND SURROUND SPEAKERS TROUBLESHOOTING



LED behaviors

-  **Connected**
The white light stays on
-  **Disconnected**
The white light is off

 **Connection failed**
Amber light flashing

Make sure the soundbar is powered on.



Connect button

To connect or disconnect the subwoofer and speakers manually from the soundbar, press the connect button.

Note: The subwoofer and speakers remain paired with the soundbar even when disconnected.

More help:

If the connection continues to fail, scan the QR code on the back page for troubleshooting steps.

SOUNDBAR LED LIGHTS

Bass minimum
One white light on the left



Dialogue minimum
One white light on the left



Bass maximum
Five white lights



Dialogue maximum
Five white lights



Treble minimum
One white light on the left



Mute
Five white lights stay on



Treble maximum
Five white lights



Bluetooth ready to pair
One flashing blue light



DTS TruVolume on
Five white lights turn on



Bluetooth paired
One blue light



DTS TruVolume off
Three white lights turn on



Surround Effect on
Five white lights turn on starting with the middle light



Dolby Digital or DTS playback
One green light flashes once



Surround Effect off
Five white lights turn off starting with the outside lights



Dolby Atmos or DTS:X playback
Three green lights flash once



Surround Speaker Volume minimum
One white light on the left



Surround Speaker Balance default
One white light



Surround Speaker Volume maximum
Five white lights



Surround Speaker Balance left maximum
Three white lights on left



Surround Speaker Balance right maximum
Three white lights on right



SOUNDBAR AUDIO SETTINGS



EQ **Equalizer**
EQ modes are customized sound settings for different content: Movie, Music, Sports, and Night mode.

BASS **Bass**
Adjusts the low frequency sounds from levels 1 to 9.

TREBLE **Treble**
Adjusts the high frequency sounds from levels 1 to 9.

L **Surround Speakers Balance**
Adjusts the sound between the left and right surround speaker to customize the experience for your listening position.

R

Surround Effect
Provides immersive, multi-dimensional sound experience.

DIALOG **Dialogue Enhancer**
Increases the clarity of voices from levels 1 to 5.


DTS TruVolume
Long press the Dialogue Enhancer button to turn on. Automatically adjusts volume levels for different content and apps on your smart TV.

— SURR + **Surround Speakers Volume**
Adjusts the volume on the surround speakers independently of the soundbar volume.

SOUNDBAR WALL MOUNTING ACCESSORIES



Paper wall mounting template
Sized to the device

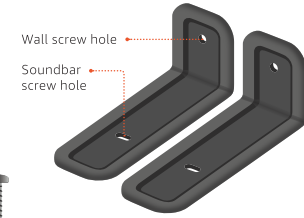

2 anchors



2 wall screws



2 soundbar screws

2 brackets

Note: Included screws and anchors are recommended for drywall. If using the anchors, do not drill into studs.

MOUNTING THE SOUNDBAR ON THE WALL

Tools you'll need


Not included in the box

Electric drill
• 5/16" (or 8 mm) drill bit
• Phillips #2 driver bit

Hammer


Level or level app

Wall-safe tape

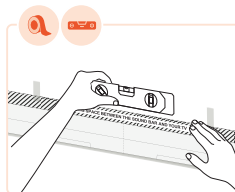

1. Level and tape the paper template to the wall


Using a level or level app, position and tape the template to the wall under your TV.

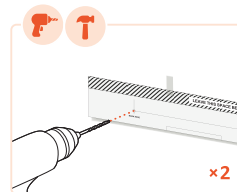

2. Drill holes and install anchors


If you're using the anchors, drill holes where the template says **MARK HERE**. After drilling both holes, remove the template and tap the anchors into the holes with a hammer.

MOUNTING THE SOUNDBAR ON THE WALL

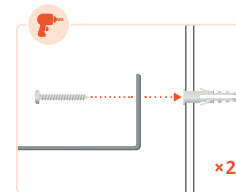


3. Attach the brackets to the wall

Insert the included wall screws into the brackets' wall screw holes. Screw the wall screws into the anchors until the brackets are firmly attached.

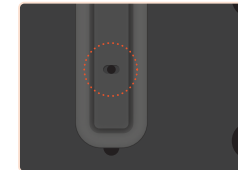

4. Position the soundbar on the brackets

Carefully line up the soundbar screw holes on the brackets and the bottom of the soundbar.

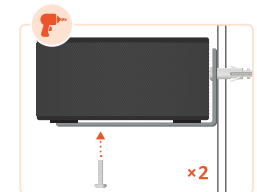

5. Attach the soundbar to the brackets

Screw the soundbar screws into the bracket's and soundbar's soundbar screw holes until secure.

Warning: Do not drill into wiring or piping.



Help and accessible information

Scan the QR code or visit:

amazon.com/setup/firetvsoundbarplus/sub/surround
